




TOOLS INCLUDED




Allen Wrench



Thin Open End Wrench

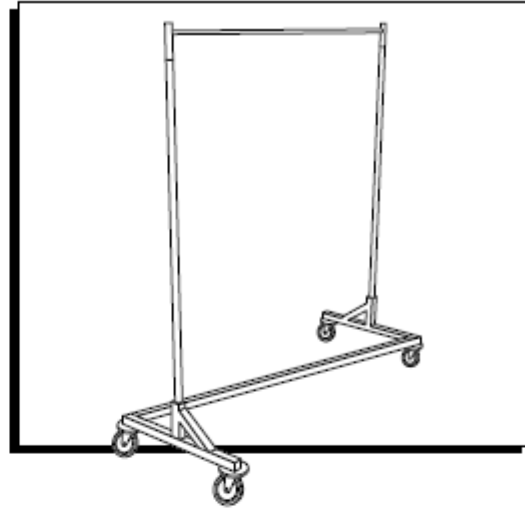

PARTS

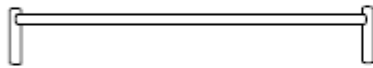

Horizontal Hang Bar x 1



Caster x 4




Caster Bumper x 4



Bolt x 4



Vertical Bar x 2

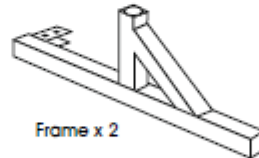

Frame x 2



Frame Cross Bar x 1



Nut x 4



Washer x 4

ASSEMBLY

1. Remove the included washers and bolts from the frames, using the included Allen wrench. (See Figure 1)
2. Slide the frame and the frame cross bar together, aligning the bolt holes. (See Figure 2)
3. Insert bolts into aligned bolt holes, placing the washers between the frame and bolt. Tighten using included Allen wrench. (See Figure 3)

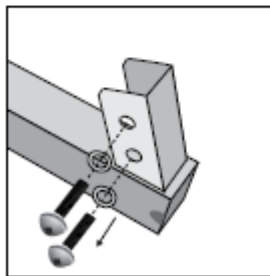


Figure 1

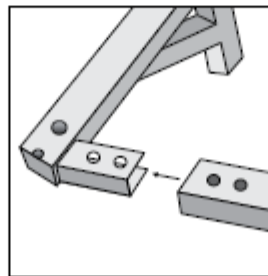


Figure 2

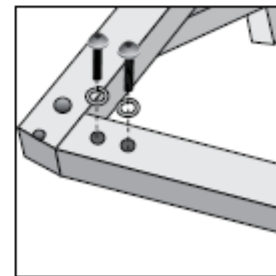


Figure 3

ASSEMBLY INSTRUCTIONS CONTINUED

4. Place caster bumpers on casters with concave side toward caster.
5. Align and insert casters with rubber bumpers. Tighten bolt on opposite side using included wrench. (See Figure 4)

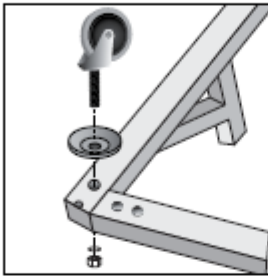


Figure 4

6. Insert the vertical support bars into the frame. (See Figure 5)



Figure 5

7. Slide horizontal hang bar on to top of the vertical support bars and lock into place. (See Figure 6)

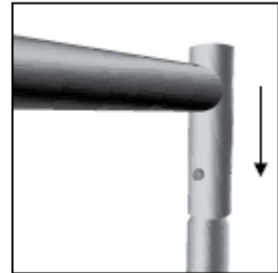


Figure 6