


West: 800-862-2228 East: 800-634-0491

Acid Free

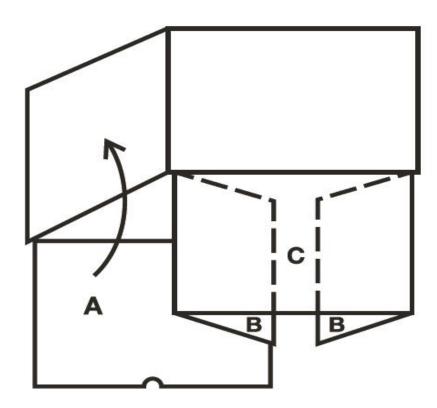

- 1. FOLD PANEL "A" 180° SO IT IS FLAT AGAINST SIDE OF BOX.
- 2. FOLD PANEL "B" 180° SO THEY LIE FLAT AGAINST PANEL "C".
- 3. FOLD PANEL "C" 90° TO FORM BOTTOM OF BOX.
- 4. UNFOLD PANELS "B" 90° SO THEY ARE FLAT AGAINST END PANELS. HAND HOLES HOW LINE UP.
- 5. UNFOLD PANEL "A" 90° SO IT LIES FLAT AGAINST BOTTOM.